



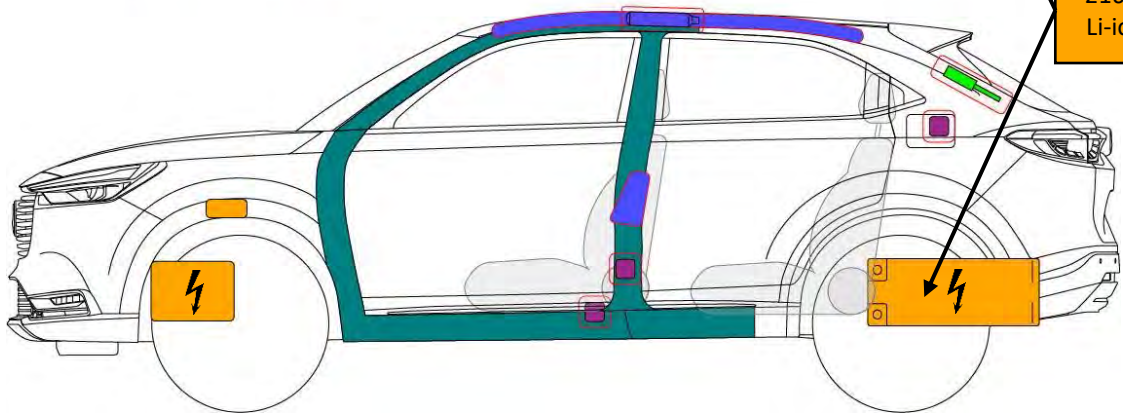

Honda HR-V e:HEV
Type: 5dr SUV
(2021 -)

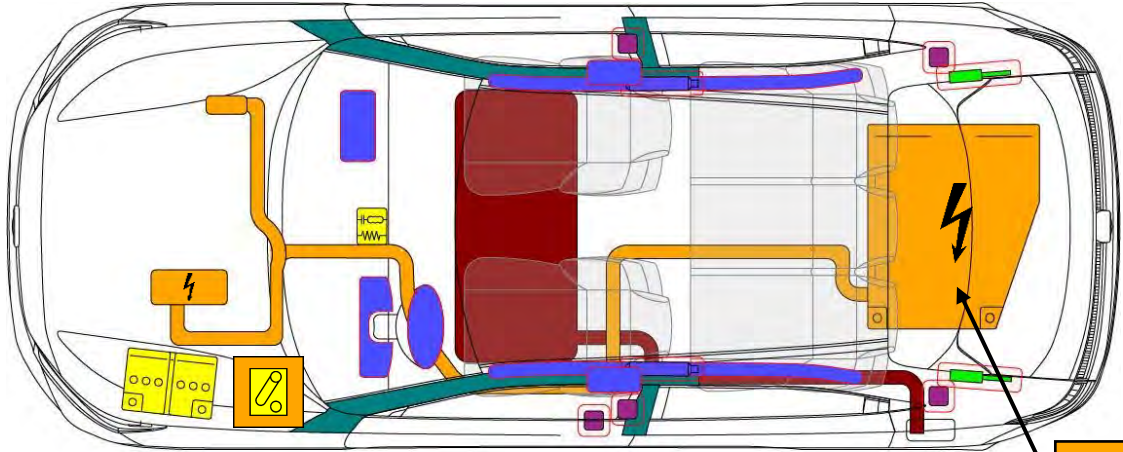

216 V
Li-ion

Airbag	Stored gas inflator	Seat belt pretensioner	SRS control unit	Pedestrian protection active system
Automatic rollover protection system	Gas strut/Preloaded spring	High strength zone	Zone requiring special attention	
Battery low voltage	Ultra-capacitor, low voltage	Fuel tank	Gas tank	Safety valve
Battery pack, high-voltage	High voltage power cable/component	High voltage device that disconnects high voltage	Fuse box disabling high voltage	High voltage ultra-capacitor
	Low voltage device that disconnects high voltage	Fuel tank content gasoline/ethanol		


Honda HR-V e:HEV Type: 5dr SUV (2021 -) – Additional Pages

1. Identification / Recognition



LACK OF ENGINE NOISE DOES NOT MEAN VEHICLE IS OFF. SILENT MOVEMENT OR INSTANT RESTART CAPABILITY EXISTS UNTIL VEHICLE IS FULLY SHUT DOWN. WEAR APPROPRIATE PPE.

Brand

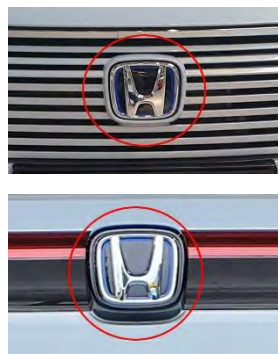

Model name





2. Immobilization / Stabilization / Lifting




Immobilize vehicle:

1. Block wheels and set parking brake;
2. Move the shift lever to the P (park) position.


Lifting points:

-  Appropriate lifting points;
-  High voltage battery;

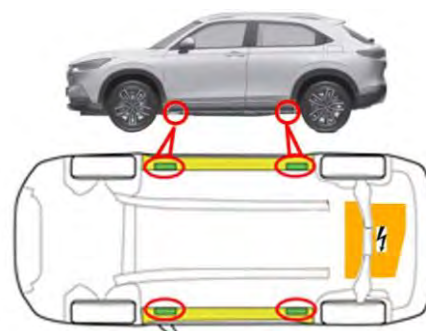


3. Disable direct hazards / Safety regulations


1. Deactivation of high voltage system, Main Method

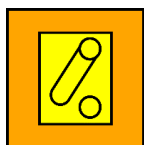


Switch OFF

 

2. Deactivation of high voltage system, Alternative Method

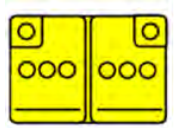

2. Deactivation of high voltage system, Alternative Method continuation

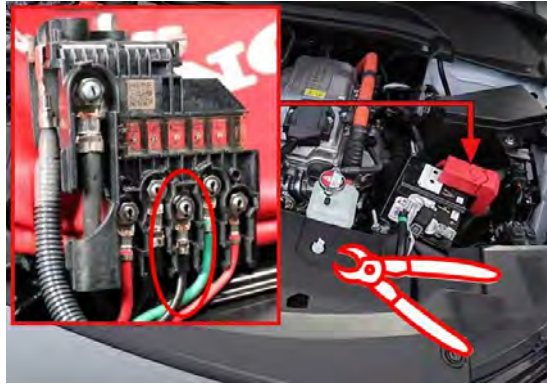

Safety regulations:




Always assume the vehicle is powered, even if it is silent!
 Make sure that the vehicle is immobilized and the propulsion system is deactivated;
 Never touch, cut, or open any orange high voltage power cable or high voltage component;
 In case of a collision with airbag deployment and/or seat belt pretensioner activation, the propulsion system will be disabled. The restraint systems are still active.

4. Access to the occupants

Seat adjustment





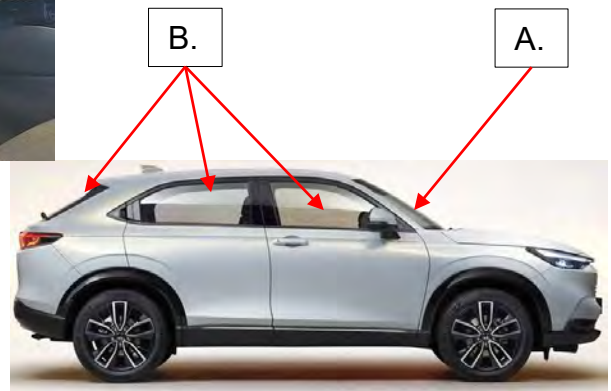





Steering column adjustment



Glass types:

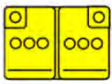- A. Laminated glass.
- B. Tempered glass.


5. Stored energy / Liquids / Gases / Solids

	216V	
	12V	
	R-1234yf 395-445 g	
	40L	

6. In case of fire



 USE LARGE AMOUNTS OF PURE WATER



POTENTIAL RISK OF BATTERY RE-IGNITION / DELAYED IGNITION!

7. In case of submersion

- There is no increased risk of electric shock in water resulting from the high voltage system;
- If possible, remove the vehicle from the water and continue with the deactivation procedure for this vehicle (see chapter 3).

8. Towing / transportation / storage

Location tow hook



Location front hook



 
Location rear hook



Towing



STORE VEHICLE IN AN OPEN-AIR PARKING AT SAFE \geq 5M DISTANCE FROM OTHER OBJECTS OR VEHICLES!



POTENTIAL RISK OF BATTERY RE-IGNITION / DELAYED IGNITION!

9. Important additional information

- No other important information;

10. Explanation of pictograms used

	Remove smart key		Electric vehicle
	Warning high voltage		Flammable
	Caution		Hazardous to the human health
	Warning; low temperature		Acute toxicity
	Air-conditioning component		Explosive
	Use water to extinguish the fire		Corrosives
	Use thermal infrared camera		Bonnet