




**Honda e:Ny1**  
**5dr SUV**  
**(2023 - )**

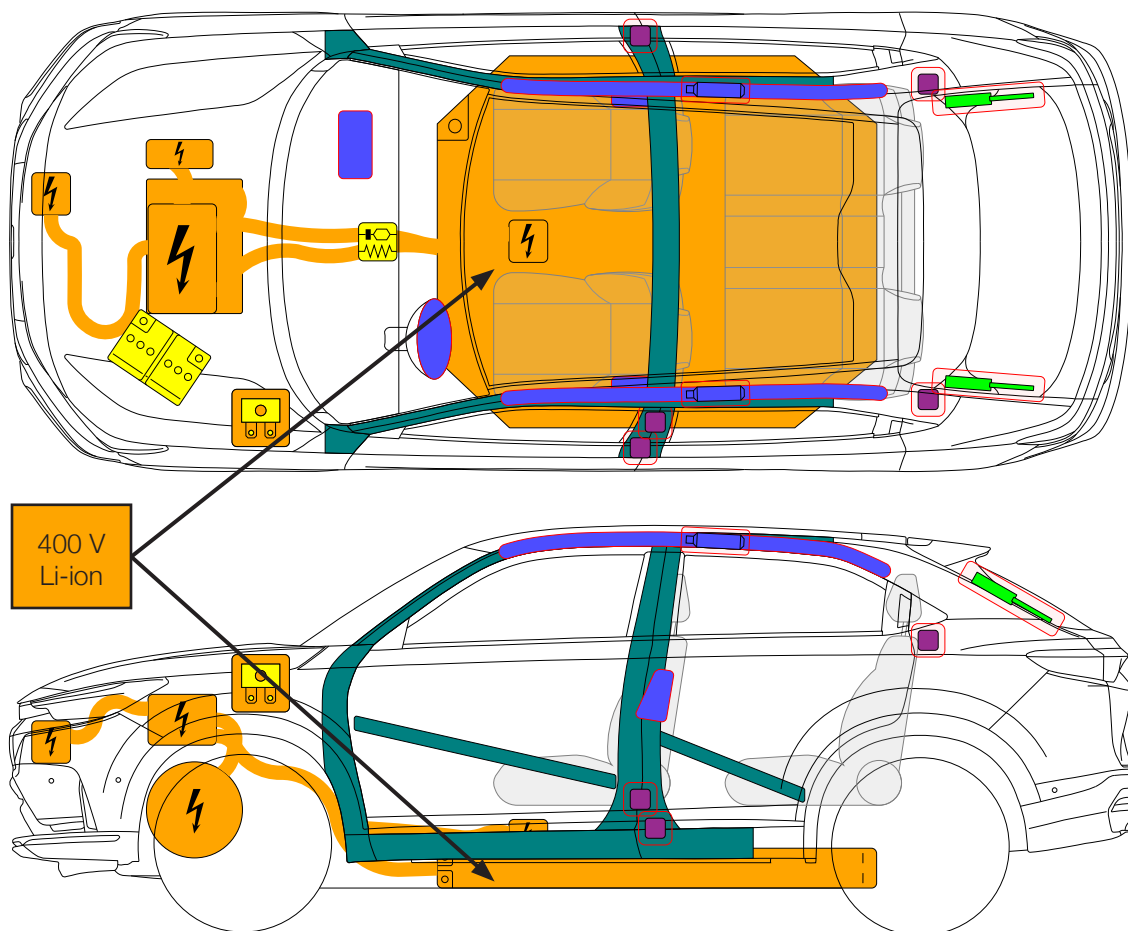

Airbag	Stored gas inflator	Seat belt pretensioner	Gas strut/preloaded spring	SRS controlunit
Battery low voltage	Battery pack, high-voltage	High voltage power cable	High voltage component	Fuse box disabling high voltage
High strength zone				

## 1. Identification / recognition



LACK OF ENGINE NOISE DOES NOT MEAN VEHICLE IS OFF. SILENT MOVEMENT OR INSTANT RESTART CAPABILITY EXISTS UNTIL VEHICLE IS SHUT DOWN. WEAR APPROPRIATE PPE.


Brand logo



Model name



Charge port

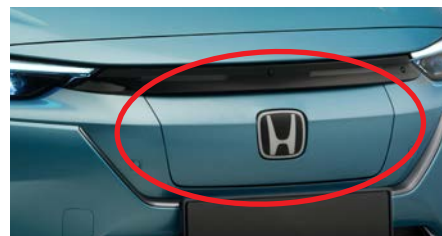



## 2. Immobilization / stabilization / lifting


### Immobilize vehicle:

1. Block wheels, apply brake and push the P (park) button to select the P (park) position
2. Set parking brake by pulling the parking brake switch (P)



### Lifting points:

-  Appropriate lifting points
-  High voltage battery

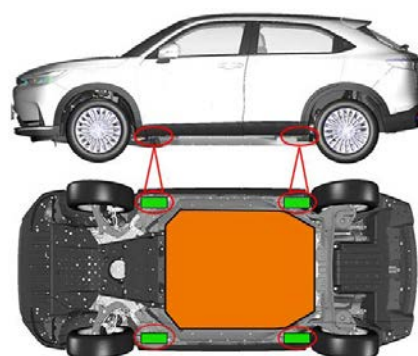

## 3. Disable direct hazards / Safety regulations




In case of a collision with seat belt pretensioner activation / airbag deployment, the high voltage system will be disabled automatically. The restraint systems are still active.



1. If the “Ready” indicator in the instrument cluster is illuminated press the Start/Stop button once. Then the high voltage system is disabled




Then, remove the electronic key and keep at least 5 m (16 ft.) away from the vehicle



2. Disconnect 12 Volt battery

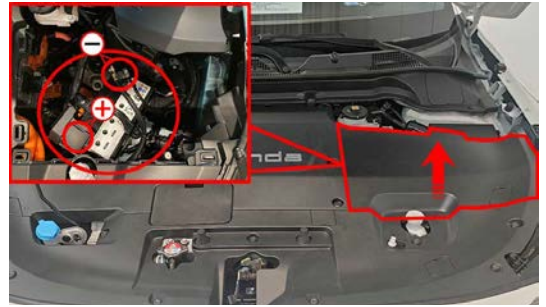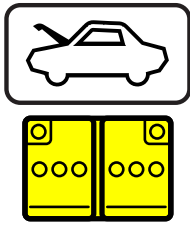

3. Deactivation of high voltage system in engine compartment

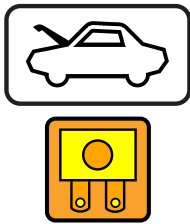

**Safety instructions:**


Never touch, cut, or open any orange high voltage power cable or high voltage component!

4. Access to the occupants

Seat adjustment  
Manual

Seat adjustment  
Electric



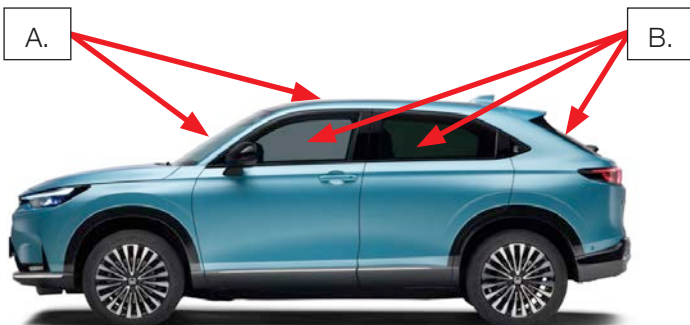




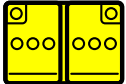







Steering column adjustment



**Glass types**

- A. Laminated glass
- B. Tempered glass

### 5. Stored energy / Liquids / Gases / Solids

	400 V	     
	12 V	 
	R-1234yf 415-465 g	   



When conventional coolant leaks (check reservoir) from the high voltage (HV) battery cooling system, HV-battery can become unstable with risk of thermal runaway. An increasing HV-battery temperature might be an indicator of thermal runaway.




### 6. In case of fire



**USE LARGE AMOUNTS OF PURE WATER**



**POTENTIAL RISK OF HV-BATTERY FIRE RE-IGNITION / DELAYED FIRE!**



Responders should always protect themselves with Personal Protective Equipment (PPE), including a Self-Contained Breathing Apparatus (SCBA), and take appropriate measures to protect civilians downwind from the incident.

### 7. In case of submersion

- There is no increased risk of electric shock in water resulting from the high voltage system
- If possible, remove the vehicle from the water and continue with the deactivation procedure for this vehicle (see chapter 3)

### 8. Towing / transportation / storage

Recovery hook storage




Location front hook



Location rear hook



Towing

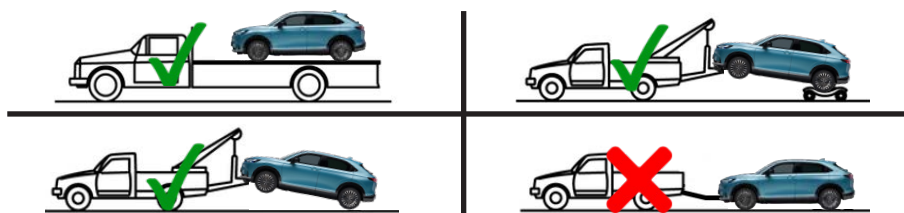

**STORE VEHICLE IN AN OPEN-AIR PARKING AT A SAFE DISTANCE  $\geq$  5M FROM OTHER AROUND OBJECTS OR VEHICLES!**

**POTENTIAL RISK OF HV-BATTERY FIRE RE-IGNITION / DELAYED FIRE!**



**10. Explanation of pictograms used**

	Remove smart key		Electric vehicle
	Warning high voltage		Flammable
	Caution		Hazardous to the human health
	Warning; low temperature		Acute toxicity
	Air-conditioning component		Explosive
	Use water to extinguish the fire		Corrosives
	Use thermal infrared camera		Bonnet